

HAYWARD®

Installation, Operation & Service Procedures Pool and Spa/Hot Tub Heaters

Models C-SPA-XI 5.5 & C-SPA-XI 11

C-SPA-XI

conforms to
UL 1261 for
outdoor or
indoor use.



Underwriters
Laboratories Inc.®

LOCAL CODES:

Your spa heater must be installed as shown in these installation instructions as well as to adhere to all local codes and electric utility requirements.

WARNING:

If you do not follow these instructions exactly, a fire or explosion may result with property damage, personal injury or loss of life.

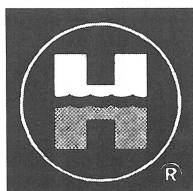
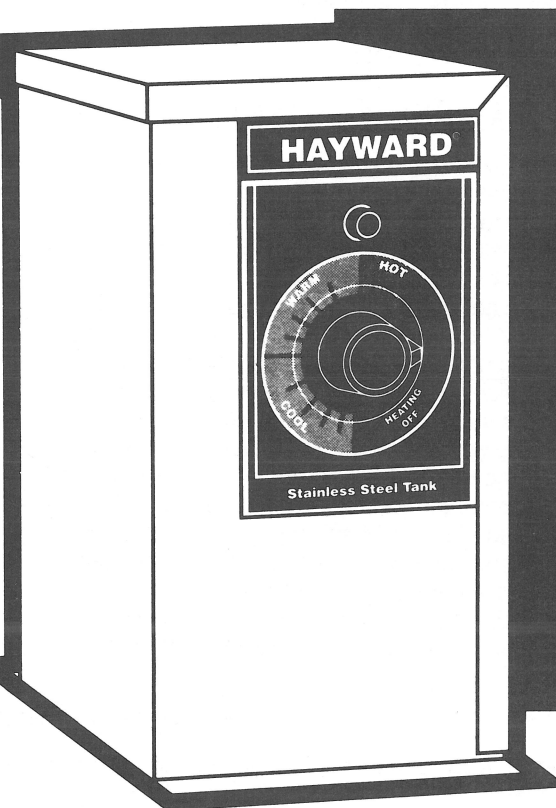


Table of Contents

	PAGE
Information	2
Warranty	2
Specifications & Dimensions	3
Water Piping	3
Electrical	3
Wiring Diagrams	4
Startup	4
Operation	4
Factory Pressure Switch	5
Above Spa Surface Installation	5
Below Spa Surface Installation	5
Maintenance & Adjustment	6
If Heater Does Not Heat	6
Parts List	7
Parts Drawing of Heater	7

Limited warranty summary:

We warrant your spa heater to be free from defects in materials and workmanship, and we will, within one year from date of installation, for the original purchaser, repair or, at our option, replace without charge any defective part. Cost of freight, installation, electricity and service labor at user's expense.

If your spa heater is damaged or destroyed by improper maintenance, excessive water hardness or incorrect water chemistry or freezing, it is not covered under the manufacturer's warranty. For full details of warranty agreement, see warranty certificates shipped with heater.

IMPORTANT SAFETY INSTRUCTIONS:

When using this electrical equipment, basic safety precautions should always be followed, including the following:

1. READ AND FOLLOW ALL INSTRUCTIONS.
2. To reduce the risk of injury:
 - A. Do not ingest alcohol or drugs during or prior to using your spa or hot tub. Ingestion of such intoxicants may cause drowsiness which can lead to unconsciousness, and subsequently result in drowning.
 - B. The water in a spa or hot tub should never exceed 104°F (40°C). A maximum water temperature in excess of 104°F is not considered safe for all persons. Lower water temperatures are recommended for extended use (exceeding 10-15 minutes) and for young children. Hotter water increases the risk of hyperthermia. (See description below).

- C. Pregnant women beware! Soaking in water above 102°F (39°C) can cause fetal damage during first three months of pregnancy (resulting in the birth of a brain-damaged or deformed child). Pregnant women should adhere to the 100°F (38°C) maximum rule.
- D. Before entering the spa or hot tub, users should check the water temperature with an accurate thermometer at several occupant locations; spa or hot tub thermostats may err in regulating water temperatures by as much as ±5°F (±3°C).
- E. Persons suffering from obesity with medical history of heart disease, circulatory problems, diabetes or blood pressure problems should obtain their physician's advice before using spas or hot tubs.
- F. Persons using medication should consult a physician before using a spa or hot tub since some medication may induce drowsiness while other medication may affect heart rate, blood pressure and circulation.
- G. If the spa is used for therapy, it should be done with the advice of a physician. Always stir spa water before entering the spa to mix in any hot surface layer of water that might exceed healthful temperature limits and cause injury.
- H. Do not tamper with controls, because scald can result if safety controls are not in proper order.

3. SAVE THESE INSTRUCTIONS.

Hyperthermia:

The causes, symptoms, and effects of hyperthermia may be described as follows: Hyperthermia occurs when the internal pressure of the body reaches a level several degrees above the normal body temperature of 98.6°F. The symptoms of hyperthermia include dizziness, fainting, drowsiness, lethargy, and an increase in the internal temperature of the body. The effects of hyperthermia include; (1) unawareness of impending hazard, (2) failure to perceive heat, (3) failure to recognize the need to exit spa or hot tub, (4) fetal damage in pregnant women, and (6) unconsciousness resulting in a danger of drowning.


⚠ WARNING: The use of alcohol, drugs or medication can greatly increase the risk of fatal hyperthermia in spas and hot tubs.

Facts about water chemistry:

FACTORS which affect spa water and, more importantly, the efficiency and operation of your spa heater.

1. PROPER FILTRATION
2. PROPER CIRCULATION
3. DISINFECTION AND OXIDATION
4. pH CONTROL AND TOTAL ALKALINITY
5. ALGAE CONTROL

pH is the measure of the acidity or alkalinity of water. As shown on this chart, it is a critical measurement.

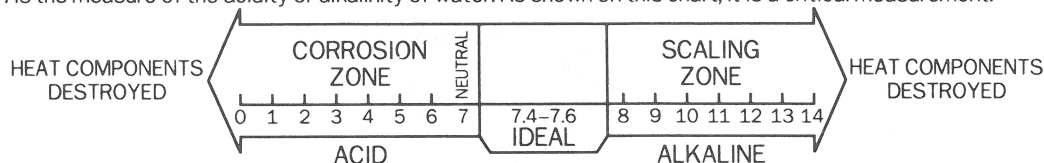

We recommend using a four way test kit to obtain...

1. CORRECT pH (7.2-7.8)
2. CHLORINE RESIDUAL (1.0-5.0 PPM)
3. TOTAL ALKALINITY (80-120 PPM)
4. CALCIUM HARDNESS

⚠ NOTE: CALCIUM HARDNESS SHOULD BE 175-350 PPM depending on spa finish.

Figure 1

Installation, start-up and operating instructions for your electric spa heater

Specifications and Dimensions:

Figure 2

MODEL	B.T.U.	KW	AMP RATINGS 240 VOLT	WIRE SIZE* 240 VOLT	GROUND WIRE SIZE*	BREAKER SIZE* 240 VOLT	GPH 20° RISE	GPH 40° RISE	WATER CONN.	SHIP WT.	
C-SPA-XI 5.5	18,766	5.5	23	10	10	30	120	56	1 1/2"	14	
C-SPA-XI 11	37,532	11	46	6	10	60	225	112	1 1/2"	14	
*PER NEC-LOCAL CODES APPLY-COPPER ONLY. WIRE SIZE APPLIES TO RUNS UP TO 50 FEET. FOR EACH ADDITIONAL 50 FOOT RUN, SELECT WIRE SIZE ONE GAUGE LARGER.											

Installer please note:

1. Inspect for concealed damage upon receipt. Advise shipper of damage. File any damage claims with delivering carrier.
2. Spa heater must be installed according to instructions or manufacturer's warranty is void.
3. Your electric spa heater can be located anywhere in an outdoor or indoor location with a minimum clearance of six (6) inches to all combustible construction. Maintain adequate access clearance for servicing heater. Locate your heater in such a way that should the tank or any of its connections leak, the water will not damage anything. Under no circumstances will we, the manufacturer, be held liable for water damage in connection with your heater. The heater should be connected in the return line from the filter to the spa. Water shut off valves must not be installed in the piping from the outlet of the spa heater to the spa. Blocking the return pipe in any fashion can create a hazardous condition.

Water piping:

These heaters are designed for use with spa/hot tub water only, as furnished by municipal water distribution systems. The warranty does not cover its use with mineral water, sea, salt or other non-potable waters.

*Minimum piping to be used is 1 1/2" I.D. (interior dimension). No valve or restriction is to be installed in line between heater outlet and spa unless the heater is below spa level. In that case, a swing check valve that does not include a shut-off feature or function should be installed to prevent back flow. No hartford loop is required.


Optional CPVC use:

CPVC piping may be used on both inlet and outlet threaded heater connections.

Typical piping diagram:

* No water shut off valves are to be installed between the heater outlet and the return to the spa/tub.

Figure 3

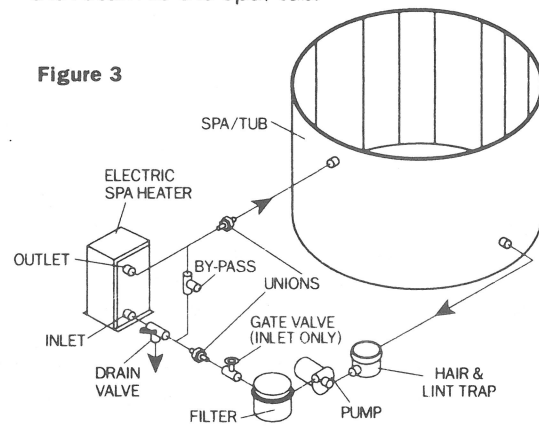

A G.E. silicone seal or similar sealant with a high elasticity must be used to compensate for temperature expansion and contraction of the dissimilar materials at the water connections, otherwise leakage will occur.

Electrical connections:

Before any electrical connections are made, be sure that the heater is full of water and that any valve in the cold water supply line is open.



Check the rating plate and wiring diagram before proceeding.

▲NOTE: Customer to furnish disconnect switch.

Wire in accordance with attached wiring diagrams.

Field wiring, power supply conductors and branch circuit protectors must be installed by a qualified electrician in accordance with Article 680 of the National Electrical Code ANS/NFPA No. 70-

C-SPA-XI Wiring: Observe correct wiring size between job site breaker and junction box in heater.

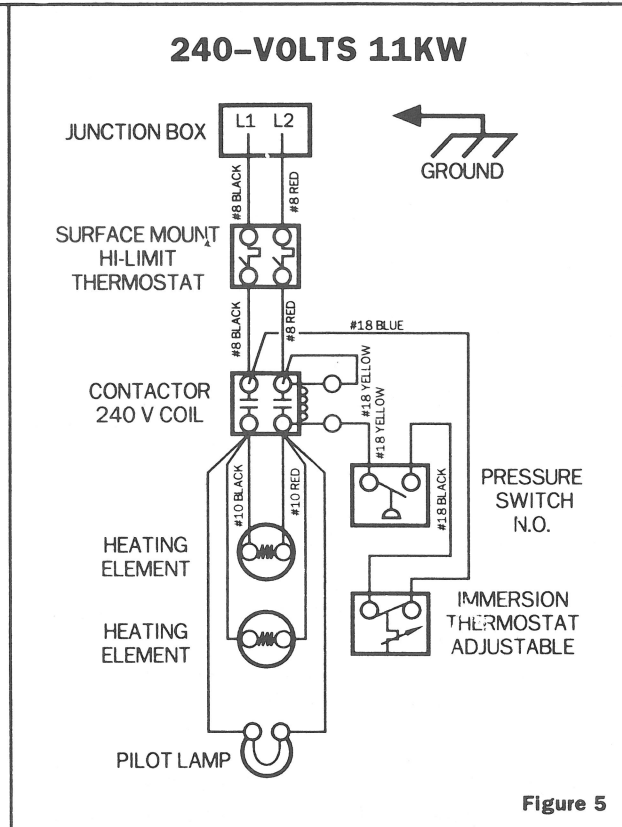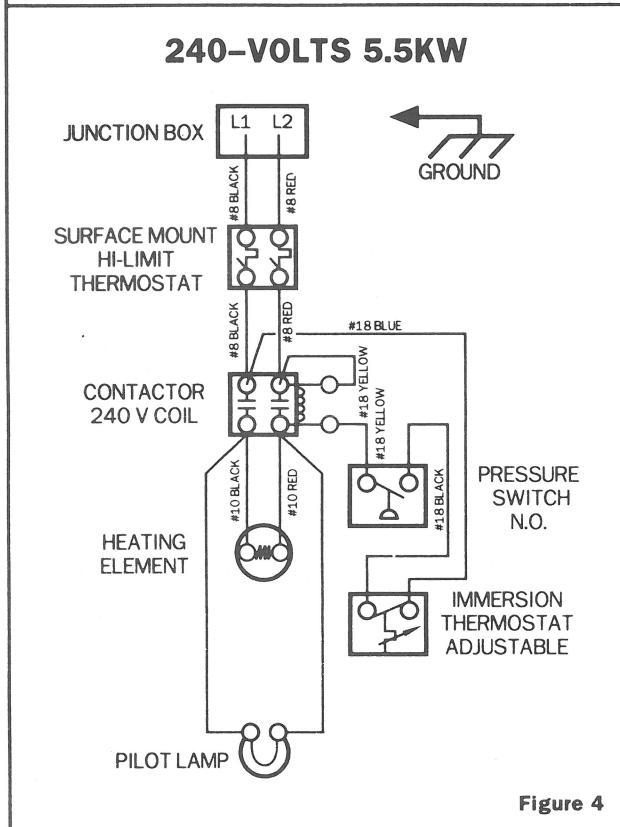

(latest edition) and in accordance with local codes and/or electric utility requirements. It is recommended that the heater supply circuit be protected by a ground-fault circuit-interrupter (GFCI) in accordance with Article 680-5(b) of the National Electrical Code.

A wire connector marked, "GROUND" is provided within the control box. To reduce the risk of electrical shock, connect this terminal or connector to the grounding terminal of the electrical service or supply panel with a continuous green insulated copper wire equivalent in size as specified for Ground Wire Size on Figure 2. Grounding must be in accordance with Article 250 of the National Electrical Code. A bonding wire must be connected to the bonding lug on the heater exterior right side Refer to Article 250 Part G. for bonding requirements of the National Electrical Code. Be sure all connections are clean and secure.

Startup:

1. Clean filter. Start filter pump. **Make sure all air is out of the spa plumbing lines.** Wait five minutes.
2. Close electrical disconnect switch.
3. Set C-SPA-XI thermostat at desired temperature. Disconnect time clock during initial heat-up. Your outlet temperature will feel just slightly warmer than the inlet temperature. Do not be concerned; this is normal.

Operation:

The adjustable external thermostat on your C-SPA-XI heater has a "positive off" provision at the lowest temperature setting. Movement of the thermostat knob to this position will prevent operation of the heater.

⚠CAUTION: Internal components of the heater are still "live" electrically even with the thermostat turned off. The main breaker or disconnect for this unit must be turned off before servicing the unit. The spa temperature may be adjusted by turning the thermostat knob up or down until the spa temperature reaches the desired level. Adjustments should be made in small increments and sufficient time should be allowed for the body of water to heat or cool before further adjustments are made. When the exact desired comfort level is reached, you may wish to lock the thermostat dial lock at this position by tightening the dial lock screw.


The pilot lamp on your C-SPA-XI is an indicator that the element(s) should be operating. It will cycle on and off with the thermostat.

⚠WARNING: Spa temperature is to be determined by an accurate spa thermometer. "Test" the water temperature with your hand before entering the spa. See "Warning" on page 2.

Factory installed pressure switch:

The function of the pressure switch is to shut the spa heater off if the pump is turned off or if the

Figure 6

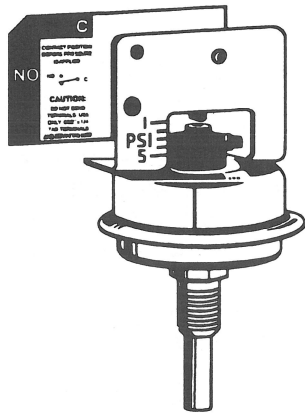

filter gets so dirty that it restricts the flow of the water to the heater. Do not adjust the switch unless the heater is installed more than two (2) feet below surface of spa water. If adjustment is necessary, follow the procedure as outlined. Refer to the diagrams for approximate settings for various heights.

Your heater is equipped with a pressure switch that is adjustable from one to five pounds. The switch is factory set at 3 psi \pm 3/4 psi.

Installation below spa surface:

CAUTION: Do not remove any access covers from the C-SPA-XI until all sources of electrical power to the unit have been turned off or disconnected. Do not make any repairs or pressure switch adjustments with the power on.

1. Clean filter thoroughly.
2. Set heater thermostat to highest setting.
3. Start filter pump. Make sure all air is out of water lines and complete system is full of water.

4. Turn filter pump and power source off, adjust pressure switch control. Signal light on heater will indicate off when power is restored. See caution above.
5. Check pressure switch function by turning filter pump on and off causing heater to respond on or off. If heater is installed beyond pressure limits, a flow switch must be installed in water line to heater.

Installation above spa surface:

1. If heater is installed less than three (3) feet above the surface of the spa water, install eyeball fittings or directional flow fittings on the end of the return water line to the spa to create adequate back pressure at the heater to operate the pressure safety switch when filter pump is running.
2. If heater is installed more than three (3) feet above surface of spa water, install as shown above to prevent drainage of water in heater during filter change.


WARNING: No valves or other obstructions are to be installed between the heater outlet and the return to the spa. See water piping on page 3.

Two speed pump:

In some cases, the pressure from a two speed pump is below the one pound minimum required to operate the heater. This is apparent when the pressure switch cannot be further adjusted. In these cases the pump must be run at high speed to operate heater. If your pump and piping arrangements are such that the required one pound minimum pressure cannot be obtained, do not attempt to operate the heater. Correct the installation.


Installation Below Pool Surface

Figure 7

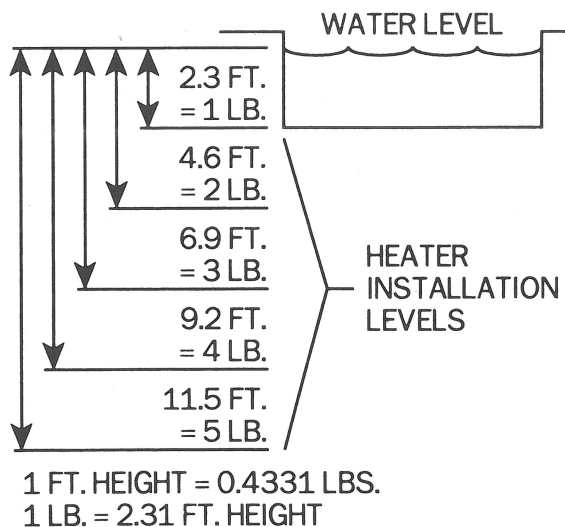

Installation Above Pool Surface.

Figure 8

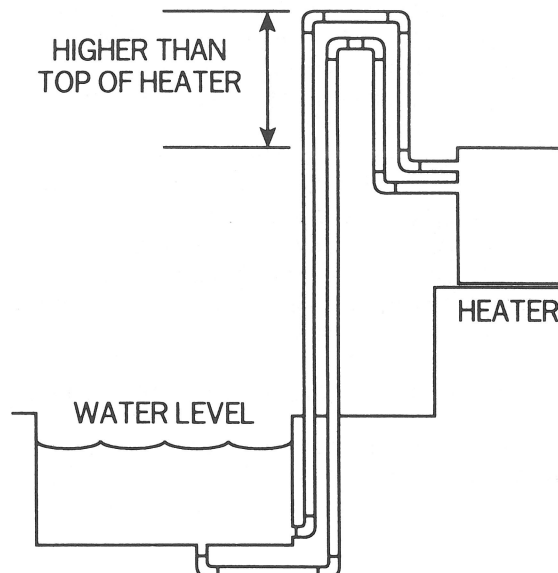

Maintenance and adjustment

Dry-firing of elements:

Caused by water voids when power is on. **All air must be purged from system before any heater start-up. It is especially important to purge all air after cleaning or changing a cartridge filter.** Since the filter casement acts as an air reservoir during this procedure, the circulation system must be on for at least five minutes to purge and bleed all air from the system before turning on power to the heater. A dry-fired element (soft annealed or blistered and/or completely burned off) is not a warranty failure.

If heater does not heat:

1. Check filter for pressure and cleanliness.
2. Turn pump on.
3. Turn the heater thermostat to the highest position.
4. If the indicator light does not come on, check the following:
 - A. Push reset button on side of heater.
 - B. Check breaker in fuse panel box.
 - C. If the reset button is engaged and the main breaker in fuse panel okay, contact your installing dealer, factory authorized service center or Hayward Pool Products, Inc.
5. If the Indicator light comes on but you have no heating, contact your installing dealer, factory authorized service center or Hayward Pool Products, Inc.

Use of chlorinators and chemical feeders:

▲WARNING: Chlorinators and feeders that are misadjusted may cause severe and rapid corrosion to the heater heat exchanger. This damage is not covered under the manufacturer's warranty.

Chemicals must be completely diluted into the pool/spa water before circulation through the heater. Check the following conditions.

- A. Chlorine tablets or bromine sticks should not be placed in the skimmer.
- B. Do not use non-stable chemicals.
- C. Chlorinator must be installed downstream from heater, have a check valve to prevent chemical back-up, or be wired in such a manner that chlorinator shuts off with the filter pump.
- D. Tether "floaters" such that they will not be drawn to the skimmer.

Contactors failures or chattering contactors:

Principally caused by dirty filters and by marginal water flow conditions. Filters must be back-

washed and the water flow must be maintained as per manufacturer's installation instructions.

In addition, contactor failures may be caused by undersized field wiring creating a high electrical resistance, and low voltage. Contactor failures under these conditions are not warranty problems.

Lack of, or insufficient cleaning and back-washing filter skimmer baskets can result in contactor failure. This is not covered under the certificate of warranty.

Winterization/Freezing:

If your heater is to be shut off and exposed to freezing temperature, it must be drained. Water, when frozen, will expand, damaging your tank. Shut off or disconnect your electrical supply to the heater before draining. Follow the startup instructions before you restore your electrical supply. Freeze damage is not covered by the limited warranty.

Chemical vapors:

Spa maintenance chemicals may produce vapors harmful to your C-SPA-XI. Never store chemicals or any flammables near your spa heater. Destruction of the heater by corrosion or a fire can result.

High limit:

In case of overheating, your C-SPA-XI heater will shut itself off. This is accomplished by the use of a manual reset high limit. To place the heater back in operation, reset the limit per the label instructions on the heater. If the high limit trips again, turn the main heater breaker off and contact your installing dealer, factory authorized service center or Hayward Pool Products, Inc.

Water flow:


Your C-SPA-XI must have an adequate flow of water for proper operation. (See installation and start up procedures.) Adequate water flow removes the heat produced by the heater, transfers the heat to the spa and prevents overheating. Low water flow usually results from a dirty filter or improperly adjusted manual by-pass. Manual by-pass valves should be set so that the outlet thermometer reads 6-8°F above the spa water after five (5) minutes of heater operation.

The recommended minimum flow through the heater is 12 GPM (gallons per minute) up to a maximum flow of 60 GPM. If flow exceeds 60 GPM, refer to figure 3 and install external by-pass.

Parts Illustration

Order repair parts by item number and part description with the model and serial number of the heater. The model and serial number will be found on the data plate, item no. 26.

Figure 9

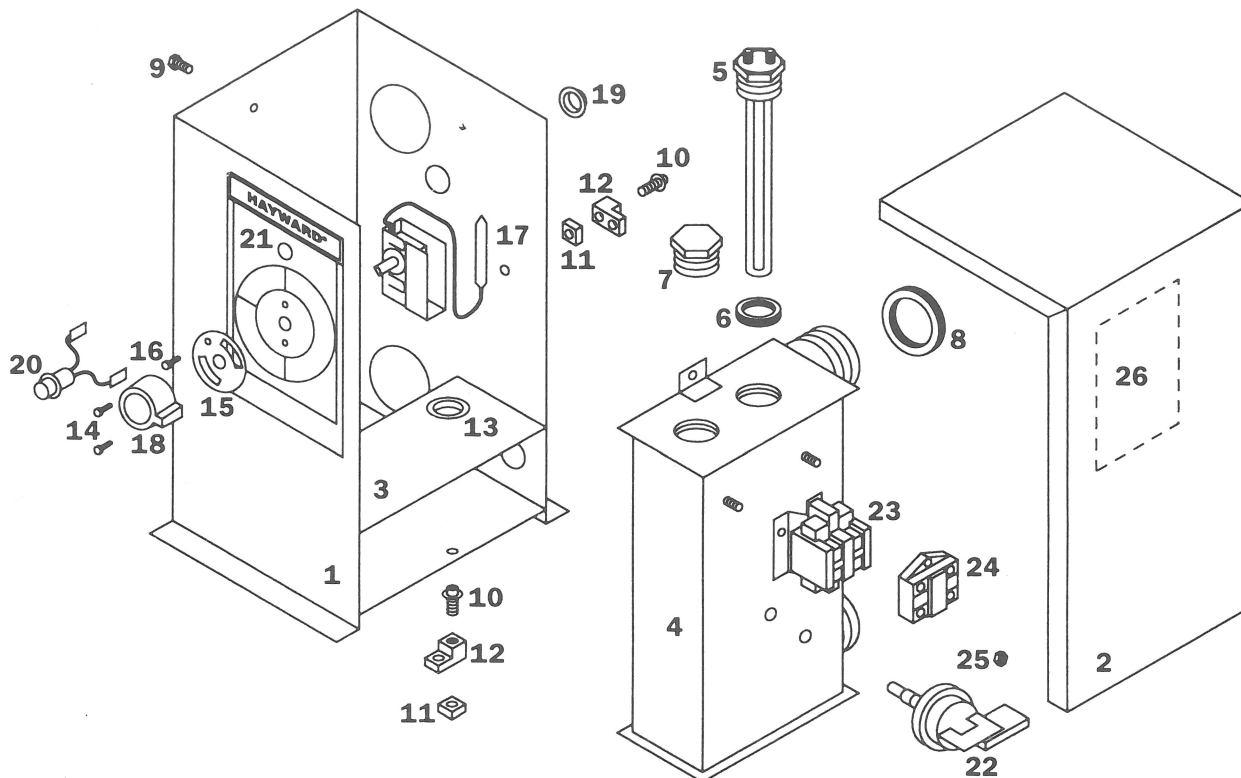


ELEMENT CHART	
MODEL	NO. ELEMENTS
C-SPA-XI 5.5	1-5.5 KW
C-SPA-XI 11	2-5.5 KW

C-SPA-XI parts list

ITEM NO.	DESCRIPTION	PART NO.	ITEM NO.	DESCRIPTION	PART NO.
1.	Jacket Assembly	CZX JKT 7500	22.	Pressure Switch	CZX PRS 1105
2.	Jacket Cover	CZX JKT 7003	23.	Contactor	CZX CON 3645
3.	Junction Box	CZX JBX 7402	24.	High Limit	CZX HLC 3105
4.	Tank	CZX TNK 6607	25.	High Limit and Contactor Nut	CZX NUT 6404
5.	Element—Wattage 5500, Voltage 240	CZX ELE 7623	†26.	Data Plate	CZX DAP 7265
6.	Element Gasket	CZX GKT 7627	NOT SHOWN		
7.	Element Hole Plug w/Gasket	CZX ELP 7622		Reset Label	CZX LBL 8400
8.	Inlet Outlet Gasket	CZX GKT 9216		Wiring Diagram Label	CZX LBL 7264
9.	Tek Screw	CZX SCR 6101		Inlet Label	CZX LBL 7700
10.	Ground Lug Bolt	CZX BLT 5411		Outlet Label	CZX LBL 7701
11.	Ground Lug Nut	CZX NUT 5403		Caution Power Label	CZX LBL 5600
12.	Ground Lug	CZX GRL 2900		Fill Warning Label	CZX LBL 5100
13.	Heyco Bushing	CZX HYB 1702		#8 Wire Red 7" w/Ring Terminals	CZX WIR 8602
14.	Thermostat Screw	CZX SCR 3003		#8 Wire Black 7" w/Ring Terminals	CZX WIR 8702
15.	Thermostat Dial Lock	CZX TDL 0102		#8 Wire Red 16"-1 Ring Terminal	CZX WIR 8603
16.	Dial Lock Screw	CZX SCR 2102		#8 Wire Black 16"-1 Ring Terminal	CZX WIR 8703
17.	Thermostat	CZX TST 3006		#18 Wire Red 7"-Solid	CZX WIR 5002
18.	Thermostat Knob	CZX TJK 2003		#10 Wire Black 7"-Solid	CZX WIR 6613
19.	Grommet, High Limit	CZX GRM 9209		#14 Wire Black 8" w/Quick Conn. Ends	CZX WIR 5801
20.	Indicator Light—240v	CZX LIT 3613		#14 Wire Blue 5" w/Quick Conn. Ends	CZX WIR 6601
21.	Thermostat Label w/Logo	CZX LBL 7257			

† Replaced upon return of damaged plate.

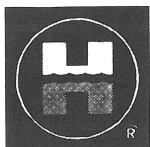

HAYWARD POOL PRODUCTS, INC.

Hayward Pool Products, Inc.
900 Fairmount Avenue
Elizabeth, NJ 07207

Hayward Pool Products, Inc.
2875 Pomona Boulevard
Pomona, CA 91768

Hayward Pool Products Canada
2880 Plymouth Drive
Oakville, Ontario L6H 5R4

Hayward S.A.
Zoning de Jumet
B6040 Jumet, Belgium



SERIES CL100/110 SERIES CL200/220 by **HAYWARD®** AUTOMATIC CHLORINE FEEDERS



Owner's Manual

IMPORTANT SAFETY INSTRUCTIONS

Basic safety precautions should always be followed, including the following: Failure to follow instructions can cause severe injury and/or death.

⚠ This is the safety-alert symbol. When you see this symbol on your equipment or in this manual, look for one of the following signal words and be alert to the potential for personal injury.

⚠ **WARNING** warns about hazards that **could** cause serious personal injury, death or major property damage and if ignored presents a potential hazard.

⚠ **CAUTION** warns about hazards that **will** or **can** cause minor or moderate personal injury and/or property damage and if ignored presents a potential hazard. It can also make consumers aware of actions that are unpredictable and unsafe.

⚠ **DANGER** indicates an imminently hazardous situation which, if not avoided, **will** result in death, serious injury, or major property damage.

The **NOTICE** label indicates special instructions that are important but not related to hazards.

Hayward Pool Products
620 Division Street, Elizabeth, NJ 07207
Phone: (908) 351.5400
www.haywardpool.com



⚠ WARNING - Read and follow all instructions in this owner's manual and on the equipment. Failure to follow instructions can cause severe injury and/or death.

⚠ WARNING – Suction Entrapment Hazard.



Suction in suction outlets and/or suction outlet covers which are, damaged, broken, cracked, missing, or unsecured can cause severe injury and/or death due to the following entrapment hazards:



Hair Entrapment- Hair can become entangled in suction outlet cover.



Limb Entrapment- A limb inserted into an opening of a suction outlet sump or suction outlet cover that is damaged, broken, cracked, missing, or not securely attached can result in a mechanical bind or swelling of the limb.




Body Suction Entrapment- A negative pressure applied to a large portion of the body or limbs can result in an entrapment.

Evisceration/ Disembowelment - A negative pressure applied directly to the intestines through an unprotected suction outlet sump or suction outlet cover which is, damaged, broken, cracked, missing, or unsecured can result in evisceration/ disembowelment.

Mechanical Entrapment- There is potential for jewelry, swimsuit, hair decorations, finger, toe or knuckle to be caught in an opening of a suction outlet cover resulting in mechanical entrapment.

⚠ WARNING - To Reduce the risk of Entrapment Hazards:



- o When outlets are small enough to be blocked by a person, a minimum of two functioning suction outlets per pump must be installed. Suction outlets in the same plane (i.e. floor or wall), must be installed a minimum of three feet (3') [1 meter] apart, as measured from near point to near point.
- o Dual suction fittings shall be placed in such locations and distances to avoid "dual blockage" by a user.
- o Dual suction fittings shall not be located on seating areas or on the backrest for such seating areas.
- o The maximum system flow rate shall not exceed the flow rating of as listed on Table 1.
- o Never use Pool or Spa if any suction outlet component is damaged, broken, cracked, missing, or not securely attached.
- o Replace damaged, broken, cracked, missing, or not securely attached suction outlet components immediately.
- o In addition two or more suction outlets per pump installed in accordance with latest ASME, APSP Standards and CPSC guidelines, follow all National, State, and Local codes applicable.
- o Installation of a vacuum release or vent system, which relieves entrapping suction, is recommended.

⚠ WARNING – Failure to remove pressure test plugs and/or plugs used in winterization of the pool/spa from the suction outlets can result in an increase potential for suction entrapment as described above.

⚠ WARNING – Failure to keep suction outlet components clear of debris, such as leaves, dirt, hair, paper and other material can result in an increase potential for suction entrapment as described above.

⚠ WARNING – Suction outlet components have a finite life, the cover/grate should be inspected frequently and replaced at least every ten years or if found to be damaged, broken, cracked, missing, or not securely attached.

⚠ CAUTION – Components such as the filtration system, pumps and heater must be positioned so as to prevent their being used as means of access to the pool by young children.

⚠ WARNING – Never operate or test the circulation system at more than 50 PSI.

⚠ WARNING – Never change the filter control valve position while the pump is running.

⚠ WARNING – To reduce risk of injury, do not permit children to use or climb on this product. Closely supervise children at all times. Components such as the filtration system, pumps, and heaters must be positioned to prevent children from using them as a means of access to the pool.



⚠ WARNING – Hazardous Pressure. Pool and spa water circulation systems operate under hazardous pressure during start up, normal operation, and after pump shut off. Stand clear of circulation system equipment during pump start up. Failure to follow safety and operation instructions could result in violent separation of the pump housing and cover, and/or filter housing and clamp due to pressure in the system, which could cause property damage, severe personal injury, or death. Before servicing pool and spa water circulation system, all system and pump controls must be in off position and filter manual air relief valve must be in open position. Before starting system pump, all system valves must be set in a position to allow system water to return back to the pool. Do not change filter control valve position while system pump is running. Before starting system pump, fully open filter manual air relief valve. Do not close filter manual air relief valve until a steady stream of water (not air or air and water) is discharged.



⚠ WARNING – Separation Hazard. Failure to follow safety and operation instructions could result in violent separation of pump and/or filter components. Strainer cover must be properly secured to pump housing with strainer cover lock ring. Before servicing pool and spa circulation system, filters manual air relief valve must be in open position. Do not operate pool and spa circulation system if a system component is not assembled properly, damaged, or missing. Do not operate pool and spa circulation system unless filter manual air relief valve body is in locked position in filter upper body.



⚠ WARNING – Risk of Electric Shock. All electrical wiring **MUST** be in conformance with applicable local codes, regulations, and the National Electric Code (NEC). Hazardous voltage can shock, burn, and cause death or serious property damage. To reduce the risk of electric shock, do **NOT** use an extension cord to connect unit to electric supply. Provide a properly located electrical receptacle. Before working on any electrical equipment, turn off power supply to the equipment.

⚠ WARNING – To reduce the risk of electric shock replace damaged wiring immediately. Locate conduit to prevent abuse from lawn mowers, hedge trimmers and other equipment.

⚠ WARNING – Electrical ground all electrical equipment before connecting to electrical power supply. Failure to ground all electrical equipment can cause serious or fatal electrical shock hazard.

⚠ WARNING – Do **NOT** ground to a gas supply line.

⚠ WARNING – To avoid dangerous or fatal electrical shock, turn **OFF** power to all electrical equipment before working on electrical connections.

⚠ WARNING – Failure to bond all electrical equipment to pool structure will increase risk for electrocution and could result in injury or death. To reduce the risk of electric shock, see installation instructions and consult a professional electrician on how to bond all electrical equipment. Also, contact a licensed electrician for information on local electrical codes for bonding requirements.

Notes to electrician: Use a solid copper conductor, size 8 or larger. Run a continuous wire from external bonding lug to reinforcing rod or mesh. Connect a No. 8 AWG (8.4 mm²) [No. 6 AWG (13.3 mm²) for Canada] solid copper bonding wire to the pressure wire connector provided on the electrical equipment and to all metal parts of swimming pool, spa, or hot tub, and metal piping (except gas piping), and conduit within 5 ft. (1.5 m) of inside walls of swimming pool, spa, or hot tub.

IMPORTANT - Reference NEC codes for all wiring standards including, but not limited to, grounding, bonding and other general wiring procedures.

⚠ WARNING – Risk of Electric Shock. Connect only to a branch circuit protected by a ground-fault circuit-interrupter (GFCI). Contact a qualified electrician if you cannot verify that the circuit is protected by a GFCI.

⚠ WARNING – Risk of Electric Shock. The electrical equipment must be connected only to a supply circuit that is protected by a ground-fault circuit-interrupter (GFCI). Such a GFCI should be provided by the installer and should be tested on a routine basis. To test the GFCI, push the test button. The GFCI should interrupt power. Push reset button. Power should be restored. If the GFCI fails to operate in this manner, the GFCI is defective. If the GFCI interrupts power to the electrical equipment without the test button being pushed, a ground current is flowing, indicating the possibility of an electrical shock. Do not use this electrical equipment. Disconnect the electrical equipment and have the problem corrected by a qualified service representative before using.

⚠ CAUTION – The pump is intended for use with permanently-installed pools and may be used with hot tubs and spas if so marked. Do not use with storable pools. A permanently-installed pool is constructed in or on the ground or in a building such that it cannot be readily disassembled for storage. A storable pool is constructed so that it is capable of being readily disassembled for storage and reassembled to its original integrity.

SAVE THESE INSTRUCTIONS

HAYWARD® Pool Products Limited Warranty

To original purchasers of this equipment, Hayward Pool Products, Inc. warrants its chemical feeders to be free from defects in materials and workmanship for a period of ONE (1) year from the date of purchase, when used in single family residential applications.

The limited warranty excludes damage from freezing, negligence, improper installation, improper use or care or any Acts of God. Parts that fail or become defective during the warranty period shall be repaired or replaced, at our option, within 90 days of the receipt of defective product, barring unforeseen delays, without charge.

Proof of purchase is required for warranty service. In the event proof of purchase is not available, the manufacturing date of the product will be the sole determination of the purchase date.

To obtain warranty service, please contact the place of purchase or the nearest Hayward Authorized Service Center. For assistance on your nearest Hayward Authorized Service Center please visit us at www.haywardpool.com.

Hayward shall not be responsible for cartage, removal, repair or installation labor or any other such costs incurred in obtaining warranty replacements or repair.

The Hayward Pool products warranty does not apply to components manufactured by others. For such products, the warranty established by the respective manufacturer will apply.

The express limited warranty above constitutes the entire warranty of Hayward Pool Products with respect to its' pool products and is in lieu of all other warranties expressed or implied, including warranties of merchantability or fitness for a particular purpose. In no event shall Hayward Pool products be responsible for any consequential, special or incidental damages of any nature.

Some states do not allow a limitation on how long an implied warranty lasts, or the exclusion of incidental or consequential damages, so the above limitation may not apply to you. This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.


***Supersedes all previous publications.**


Hayward Pool Products
620 Division Street
Elizabeth, NJ 07207


USE ONLY GENUINE HAYWARD PARTS

 **⚠ DANGER** Mixing Chemicals or using fast dissolving chemicals may result in explosion and/or fire. To avoid death, serious injury or major property damage:

- ⚠ Use only slow dissolving Trichlor Chlorine tablets.
- ⚠ Never use fast dissolving Trichlor Chlorine tablets.
- ⚠ Never mix chemicals.
- ⚠ Never mix Trichlor Chlorine tablets with Calcium Hypochlorite, or with any other form of concentrated chlorine or other chemicals. Fire and/or explosion may result.
- ⚠ Never add any other types of chlorine, pH adjusters, shock treatments or algaecides through the skimmer. If these products must be used, they should be added directly into the pool water.
- ⚠ Never isolate chlorine feeder with valves or other devices.

 **⚠ WARNING** Wear eye and skin protection while maintaining or servicing this unit.


 **⚠ WARNING** Do not inhale fumes from the chlorinator or chemical container.


 **⚠ WARNING** Chlorine feeder may be under pressure. Use caution removing cover.

INSTALLATION:

CL-100/200

1. Your CL-100/200 automatic chlorine feeder is designed for permanent installation in the pool water return line.
2. Always install the chlorine feeder **after** the heater. If there is no heater, install **after** the filter.

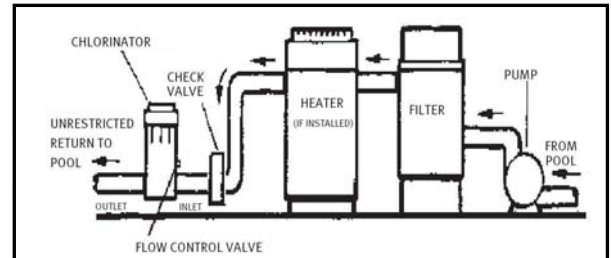


 **⚠ CAUTION** Damage to the heater or filter may result if concentrated chlorine is allowed to flow through them.

An in-line positive seal corrosion resistant check valve should be installed to reduce backflow of chlorine gas when the system is shut off. If the chlorine feeder is located below water level, you may want to install a check valve to prevent water backflow when operating/servicing the unit. The CL100 has this feature built in.

3. Both the CL-100/200 are furnished with 1 1/2" female threads. If PVC socket (solvent weld) connections are desired, order SP1500UNPAK2, socket flush union end connectors package. For threaded male and union connectors, order SP1500UNMPAK1 male union connector package (two required). Thread or socket adapters may also be used. Only use pipe sealants formulated and approved for use with ABS plastic connections (e.g. Teflon Tape, Permatex Form-A-Gasket No. 2, Laco Plasto-Joint stick). Do not over tighten pipe fitting. Proper fitting makeup is hand tight plus 1 to 1 1/2 turns maximum.


NOTICE: After starting up system, re-check all connections for leaks. Re-tighten as required.

 **⚠ CAUTION** Never install chlorine feeder directly into copper plumbing as pipe damage may occur. If you have brass or bronze backwash valves, or other sensitive metallic components, consult your dealer for precautions or recommendations for your particular system.

CL-110/220

1. The inlet connection should be made in the piping after the pump and before the filter. Mark location on pipe.
2. The outlet connection should be made in the piping after the heater. If no heater is being used, connection should be made after the filter. Mark location on pipe.
3. Based on the locations from steps. No. 1 and No. 2, cut tubing to required lengths. Be sure ends are cut evenly and cleanly.
4. Wrap Teflon tape on larger male thread of Check Valve and thread it hand tight plus 1/2 turn into outlet port of chlorinator. DO NOT OVER TIGHTEN.

NOTICE: The Check Valve is marked with a "dot". It also has a ball that "clicks" when you shake it.

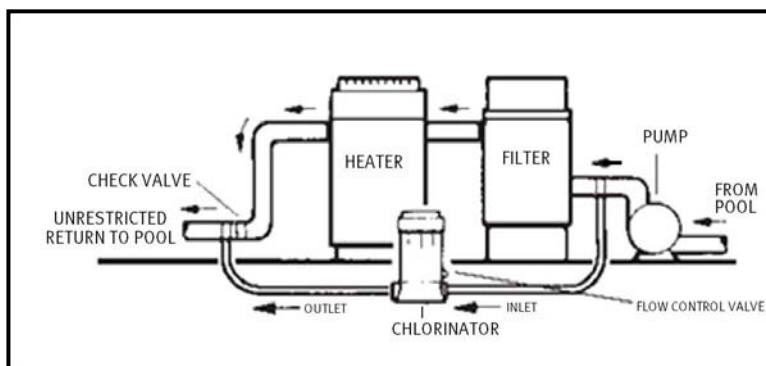

5. Wrap Teflon tape on larger male thread of the Inlet Fitting Adapter and thread it hand tight plus 1/2 turn into the inlet port of chlorinator. **DO NOT OVER TIGHTEN.**
6. To connect inlet tubing to chlorinator, place Compression Nut over inlet tubing and slide nut up about 2". Insert the tubing all the way into the Inlet Fitting Adapter socket and, holding tubing in place, tighten nut firmly by hand. Do not over tighten.
7. Connect outlet tubing to the Check Valve in the same manner as in step 6 above.

NOTICE: The saddle fittings and clamps are designed to fit the O.D. of 1 1/2" or 2" pipe.

8. Drill a 3/8" hole at location identified in Step 1 of Planning Installation section. Clean all burrs, shavings etc. Fit Saddle Fitting, with gasket, into oval shaped hole in clamp and insert fitting into the 3/8" hole. Secure clamp around Saddle Fitting, gasket and pipe and tighten securely to achieve a good seal. Do not over tighten clamp.
9. Drill a 3/8" hole at location identified in Step 2 of Installation section for CL-110/220. Install Saddle Fitting as in Step 8 above.
10. Connect inlet and outlet tubing to the Saddle Fittings with Compression Nuts as in Step 6 above. Do not over tighten.

⚠ CAUTION Never install chlorine feeder directly into copper plumbing as pipe damage may occur. If you have brass or bronze backwash valves, or other sensitive metallic components, consult your dealer for precautions or recommendations for your particular system.

NOTICE: After starting up system, re-check all connections for leaks. Re-tighten as required.

DIRECTIONS FOR USE:

GENERAL

Before using your chlorinator, your pool/spa water should be properly balanced and conditioned and should have a chlorine residual of approximately 1.0 to 1.5 ppm. Follow dealer and chemical manufacturer's directions and instructions.

Check chlorine residual daily and adjust the dial valve for more or less chlorine. The chlorine demand for pools and spas varies based on usage, temperature, sunlight, etc. Initially, you'll have to experiment to determine the proper amount of chlorine and the correct valve setting required for your pool and filter time cycle. Follow chemical manufacturer's instructions for proper chlorine level.

⚠ DANGER Mixing Chemicals or using fast dissolving chemicals may result in explosion and/or fire.

To avoid death, serious injury or major property damage:

- ⚠ Use only slow dissolving Trichlor Chlorine tablets.
- ⚠ Never use fast dissolving Trichlor Chlorine tablets.
- ⚠ Never mix chemicals.
- ⚠ Never mix Trichlor Chlorine tablets with Calcium Hypochlorite, or with any other form of concentrated chlorine or other chemicals. Fire and/or explosion may result.
- ⚠ Never add any other types of chlorine, pH adjusters, shock treatments or algaecides through the skimmer. If these products must be used, they should be added directly into the pool water.
- ⚠ Never isolate chlorine feeder with valves or other devices.

⚠ WARNING Wear eye and skin protection while maintaining or servicing this unit.

USE ONLY GENUINE HAYWARD PARTS





- ⚠ WARNING** Do not inhale fumes from the chlorinator or chemical container.
- ⚠ WARNING** Chlorine feeder may be under pressure. Use caution removing cover.

REFILLING CHORINATOR

1. Shut off all pumps and pump timers.
2. Turn chlorine feeder flow control valve to "OFF".
3. Verify chlorine feeder return line to pool is unrestricted.
4. Wait one minute to relieve system pressure before attempting to remove cover.
5. If installed in a flooded system, shut off valves to isolate chlorinator.
6. Remove cover.
7. Refill chlorine feeder with slow dissolving Trichlor-Chlorine Tablets.
8. Secure cover to chlorine feeder.
9. If installed in a flooded system, open valves to assure flow from pump to pool.
10. Turn flow control valve on chlorinator to desired setting and restart pump.

MAINTENANCE:

TO CHANGE O-RING CL100/110

1. Read and follow instructions in Steps 1 to 5 in Refilling Chlorinator section.
2. Remove the O-Ring and replace with a Genuine Hayward Part O-Ring (part no. CLX110K).
3. Replace cover. If chlorinator needs to be refilled, read and follow instructions in Steps 6 to 8 in Refilling chlorinator section.

TO CHANGE O-RING CL200/220

1. Read and follow instructions in Steps 1 to 5 in Refilling Chlorinator section.
2. Pry off Logo Cap, located on the cover of the chlorinator. Unscrew and remove retainer screw. Cover may now be slipped free of the Cover Cap.
3. Replace O-ring with a Genuine Hayward Part O-ring (part no. CLX200K). Reassemble being sure Slip Washers are in place on stem of Cover (inside), and under head of Retaining Screw.
4. Replace cover. If chlorinator needs to be refilled, read and follow instructions in Steps 6 to 8 in Refilling Chlorinator section.

TO REMOVE FLOW CONTROL VALVE HANDLE

Set pointer to FULL. Insert screwdriver in slot opposite pointer, lift up and rotate handle counterclockwise. This allows the handle index lock tab to clear the body ridge.

TO INSTALL FLOW CONTROL VALVE HANDLE

1. The flow control valve handle Genuine Hayward Part (CLX200PA) is furnished in two pieces.
2. To install push the handle into the stem and fully install stem into body. You may have to remove handle and reposition to assure the stem is fully seated.
3. Remove handle by pulling straight out.
4. Apply a single drop of Super Glue to the end of the stem, push on handle, positioned in the OFF position. Apply pressure for 30 seconds.

WINTERIZING

Where freezing temperatures can be expected, drain all water and remove all chlorine from chlorinator. (For in-line permanently installed unit remove drain plug). Carefully remove all tablets and pieces of tablets. Rinse out chlorinator thoroughly with water. Replace cover and drain plug.

VACUUMING

When vacuuming, close flow control valve to prevent bypass of sediment and possible clogging of control valve.

LUBRICATION


Never use petroleum type lubricants on Cover O-Ring. To lubricate use Genuine Hayward Part Jack's Lube No. 327 (Part No. SP032712).

USE ONLY GENUINE HAYWARD PARTS

SPARE PARTS


CL100

Ref No.	Part Number	Description	No. Req'd
1	CLX110C	Cover	1
2	CLX110K	O-Ring	1
3	CLX110FA	Control Knob Assembly	1
4	CLX220CV	Check Valve Assembly	1
5	SPX1700FGV	Drain Plug w/Gasket	1
	SP032712	Hayward Jack's Lub #327	1

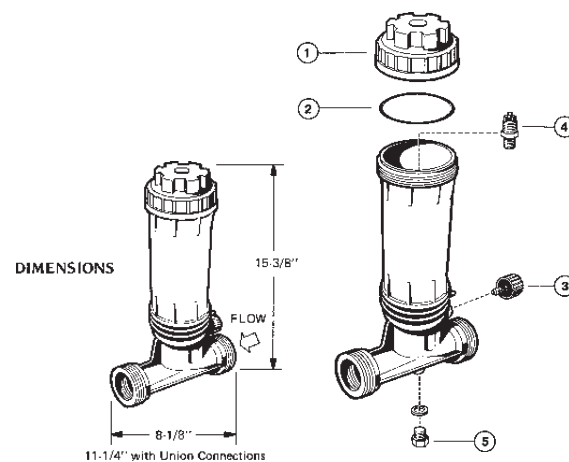


CL200

Ref No.	Part Number	Description	No. Req'd
1	CLX200E	Logo Cap	1
2	CLX200G	Cover Retaining Screw	1
3	CLX200W	Slip Washer	2
4	CLX200C	Cover Cap	1
5	CLX200B	Cover	1
6	CLX200K	O-Ring	1
7	CLX200H	Feeder Tube (some models)	1
8	CLX200PA	Control Valve Assembly	1
9	SPX1700FA	Drain Plug w/Gasket	1
10	SPX1500UNPAK	Union Connectors--Socket (2)	-
11	CLX200BS	Base	1
	SP032712	Hayward Jack's Lub #327	1

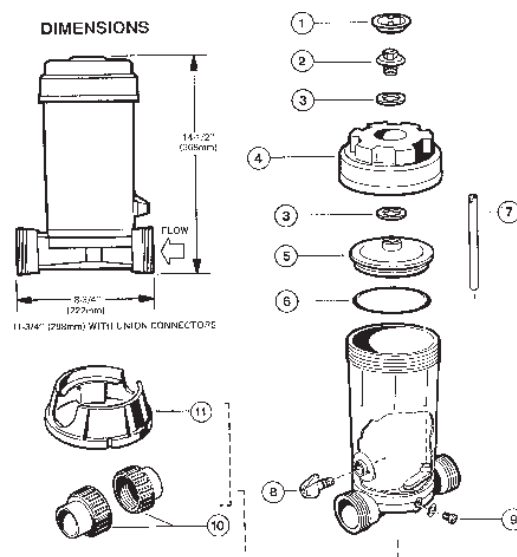


CL110

Ref No.	Part Number	Description	No. Req'd
1	CLX100C	Cover	1
2	CLX110K	O--Ring	1
3	CLX110DA	Dial Flow Valve	2
4	CLX110B	Base	1
5	CLX220CV	Check Valve Assembly	1
6	CLX220H	Compression Nuts	4
7	CLX220G	Saddle Fitting	2
8	CLX220K	Saddle Clamp	2
9	CLX220J	Plastic Tubing--8 Ft.	1
	SP032712	Hayward Jack's Lub #327	1

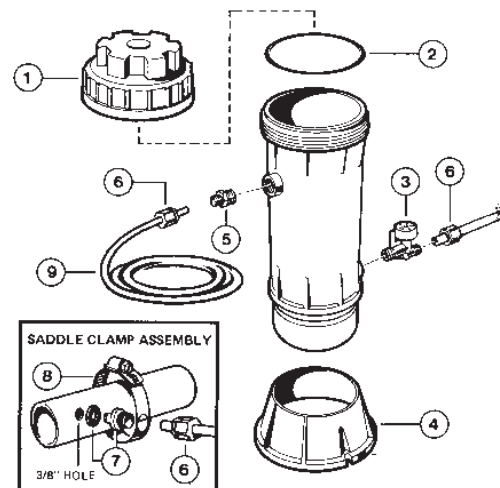

USE ONLY GENUINE HAYWARD PARTS

Ref No.	Part Number	Description	No. Req'd
1	CLX200E	Logo Cap	1
2	CLX200G	Cover Retaining Screw	1
3	CLX200W	Slip Washer	2
4	CLX200C2	Cover Cap	1
5	CLX200B	Cover	1
6	CLX200K	O-Ring	1
7	CLX200H	Feeder Tube (some models)	1
8	CLX200PA	Control Valve Assembly	1
9	CLX220B	Base	1
10	CLX220CV	Check Valve Assembly	1
11	CLX220D	Inlet Fitting Adapter	1
12	CLX220H	Compression Nuts	4
13	CLX220G	Saddle Fitting	2
14	CLX220K	Saddle Clamp	2
15	CLX220J	Plastic Tubing—8 ft.	1
	SP032712	Hayward Jack's Lub #327	1

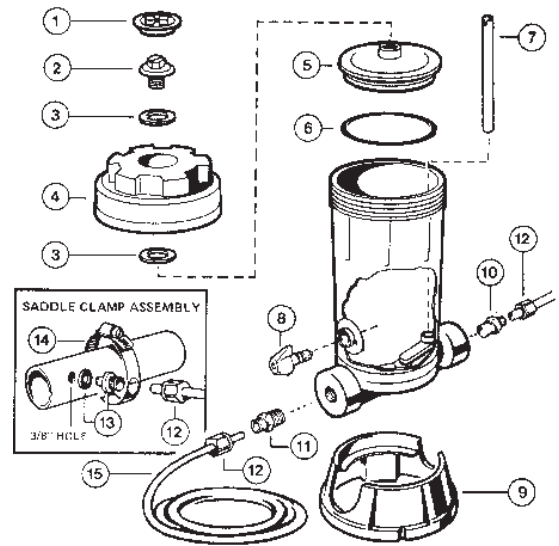

(Retain For Your Records)

▲ Retain this Warranty Certificate (upper portion) in a safe and convenient location for your records.



DETACH HERE: Fill out bottom portion completely and mail within 10 days of purchase/installation or register online.

Warranty Card Registration

Register online at www.haywardpool.com

Or REGISTER YOUR WARRANTY ON-LINE AT WWW.HAYWARDPOOL.COM

Years Pool has been in service <input type="checkbox"/> < 1 year <input type="checkbox"/> 1-3 <input type="checkbox"/> 4-5 <input type="checkbox"/> 6-10 <input type="checkbox"/> 11-15 <input type="checkbox"/> >15	
Purchased from _____	
<input type="checkbox"/> Builder <input type="checkbox"/> Retailer <input type="checkbox"/> Pool Service <input type="checkbox"/> Internet/Catalog	
Company Name _____	
Address _____	
City _____	State _____ Zip _____
Phone _____	
Type of Pool: <input type="checkbox"/> Concrete/Gunite <input type="checkbox"/> Vinyl <input type="checkbox"/> Fiberglass <input type="checkbox"/> Other _____	
<input type="checkbox"/> New Installation <input type="checkbox"/> Replacement	
Installation for: <input type="checkbox"/> In Ground <input type="checkbox"/> Above Ground <input type="checkbox"/> Spa	



Hayward is a registered trademark of Hayward Industries, Inc.